



 **plastpro**[®]

KNOW THE BEAUTY OF INNOVATION

Pre-Finish Kit


Limited
5-Year
Finish
Warranty

Contains everything you need to stain
one prehung door and two sidelites
or **one double door unit.**

Stain color Options:

You can control the shade (lighter or darker) of each of the 6 stain colors during application by varying the amount of stain applied.

*Actual stain color may vary. For best result, test on skin sample first.

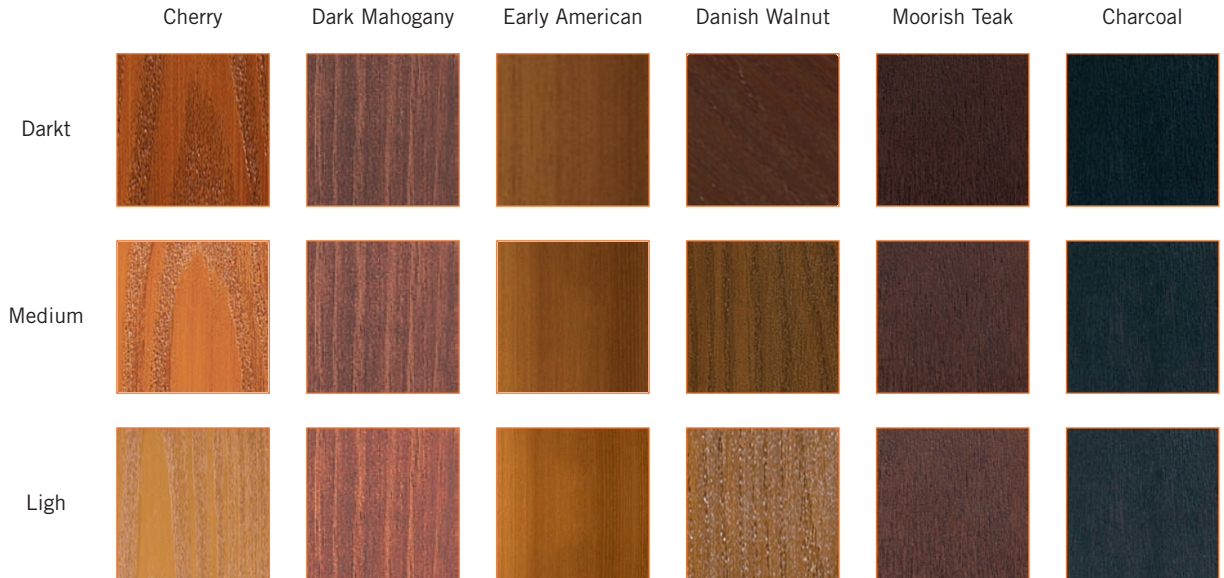



Pre-Finish Kit

KNOW THE BEAUTY OF INNOVATION

- Add increased protection and durability to the life of your Plastpro fiberglass entry door.
- New water-based top coat is environmentally friendly and allows faster drying times.
- Special formula offers long lasting vibrant colors.
- Easy-to-Use for the Do-It-yourselfer and Professional Painters
- Designed exclusively for Plastpro Fiberglass Entry door.

Contains everything you need:

ZAR® Exterior Water-Based Polyurethane(qt)	One Cheese Cloths
ZAR® Wood Stain (pt)	Two Stir Sticks
Mineral Spirits (4 oz.)	One Pair of Latex Gloves
Two 2" Foam Brushes	Two Skin Samples
One 2-1/2" Synthetic Bristle Brush	Door Staining Instructions



NORMAL MAINTENANCE

Even a well-finished fiberglass door will be affected by exposure and weathering from sun, moisture, and air pollutants. It is considered normal maintenance to re-apply the topcoat approximately every two years.



STEP 1: SURFACE PREPARATION

1. Lay door horizontally on saw horses or a table.
2. Remove all the hardware and mask off anything you don't want stained such as the glass insert.
3. DO NOT SAND GRAINED FIBERGLASS
4. Wipe the door with mineral spirits or acetone to clean any dust or residue from the surface. Allow door surface to dry completely before applying stain.



STEP 2: STAIN APPLICATION

FIRST COAT

1. Starting at the center of the door, stain one to two panels at a time. Apply stain with Cheese Cloths, or rag. Apply enough stain to fill the door grain.
2. With a clean, lint-free cloth, softly wipe the surface until you reach your desired tone.
TIP: When the rag becomes saturated with stain, re-fold to work with a less-saturated section. Be sure to use the same rag for the whole door.
3. After all the stain is applied evenly you may add finishing touches by using a small 1" to 2" brush or cotton swabs.



SECOND COAT (if desired)

Let the stain dry thoroughly per the stain manufacturer's recommendation before applying 2nd coat of stain. Temperature and conditions will affect dry time

STEP 3: PROTECTIVE TOP COAT

Application of polyurethane top coat with UV inhibitors like ZAR® Exterior Polyurethane, Wood Kote® Flagship UV, or Minwax® Fast Drying Polyurethane for exterior applications

1. After stain has completely dried (per stain manufacturer's directions), mix the top coat well and apply evenly using a clean dry 2 1/2" soft bristle brush or 2" foam brush. Be sure to stop when the grain changes direction.
2. Apply three coats of finish, allowing at least 3 hours of drying time between each application.

